

THE LEGEND IS BACK!



High performance in compact body

# PS-7 / PS-7FL

Portable Depth Sounder



# HONDEX® PS-7 / PS-7FL

## PS-7

Portable Depth Sounder



### ● 50m WATERPROOF

Unique portable sounder contains a dry cell and a transducer inside. It is used for marine diving, fishing on the small boat or measurement of water depth with 50m waterproof and anti-impactness.

### ● EASY OPERATION

Distance can be measured by pointing the sensor toward the object and sliding the power switch only.



Backlight display helps the easy operation during night time.

## PS-7FL

Portable Depth Sounder with Float Sensor



### ● SIMPLE OPERATION

With float sensor, you can operate PS-7 on the boat and yacht which is too large to use standard PS-7. And it is effective for the fishing on the shore and break water as well as on the boat.

### ● FLOAT SENSOR

Float sensor with anti-impactness enables you to operate the unit securely. (Cable length: 10m.)



## COMMON FEATURES OF PS-7 & PS-7FL

### ● OPERATION BY DRY CELL BATTERY

You can operate with dry cell battery 006P. Auto power off function turns off the power automatically about 10 seconds after you release the power switch.



### ● INNER LIGHT


During sliding the switch on, the display is lit up by built-in light. So you can operate the unit in the night time.



## SPECIFICATIONS

	PS-7	PS-7FL
DISPLAY	LCD ( 7 segments )	
FREQUENCY	200kHz (Beam Angle : 24°)	200kHz (Beam Angle : 15°)
DEPTH SCALE	0.6~80m (1.8~260feet )	
BACK LIGHT	LED	
WATERPROOF	50m (150feet ) depth	_____
POWER OFF	Automatical (for about 10 seconds)	
LENGTH OF FLOAT SENSOR'S CABLE	_____	10m
OPERATING VOLTAGE	DC9V (Dry Cell 006P)	
BATTERY LIFE	Approximately 500 activations with battery	
WEIGHT	Approx. 190g	Display : Approx. 170g Sensor : Approx. 450g
DIMENSIONS	42(φ)×198(L)mm	Display : 42(φ)×198(L)mm Sensor : 50(φ)×140(L)mm

## DIMENSIONS

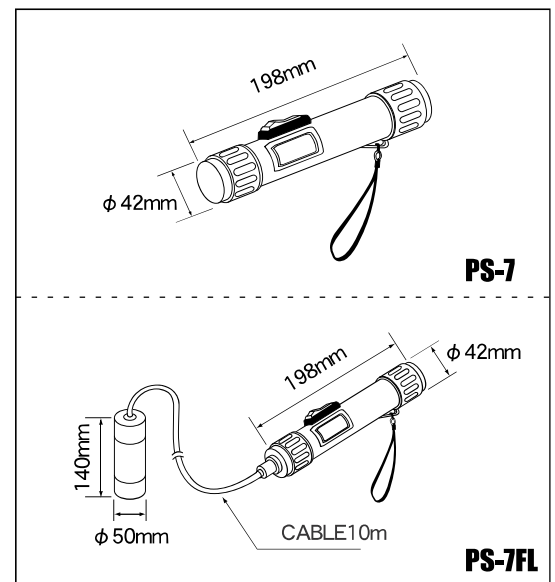

Specifications are subject to change without notice.

● Dealer



HONDA ELECTRONICS CO., LTD.

20 Oyamazuka, Oiwa-cho,  
Toyohashi, Aichi 441-3193, Japan

TEL: +81-532-41-2512

<http://www.honda-el.co.jp/en/marine/>



HONDEX® is the registered trademark of HONDA ELECTRONICS CO.,LTD. in the United States, Japan and other countries.

3 OCT 2016