


HONDEX®

Black-Box Style Combo
HDX-121-BB

Cost Effective Solution for Commercial Fishing

Simple & Easy Operation

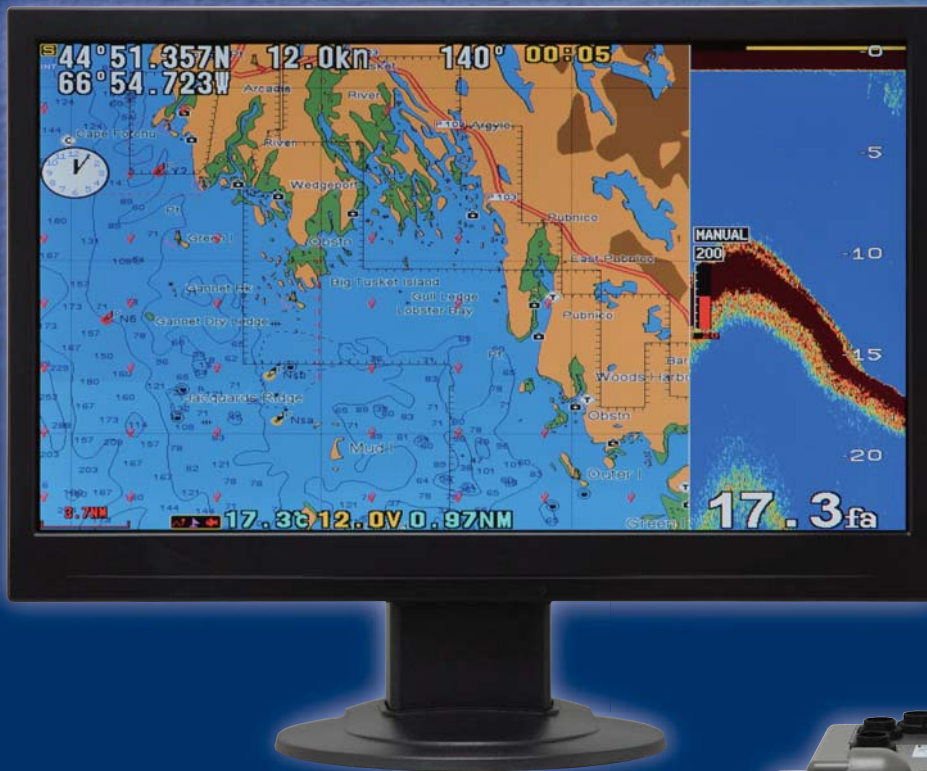


Black-Box Style Combo
HDX-121-BB
Echo Sounder / GPS Plotter
50 & 200kHz Model

Di HONDEX
DIGITAL
TECHNOLOGY



"Di" series utilizing HONDEX's latest digital technology.

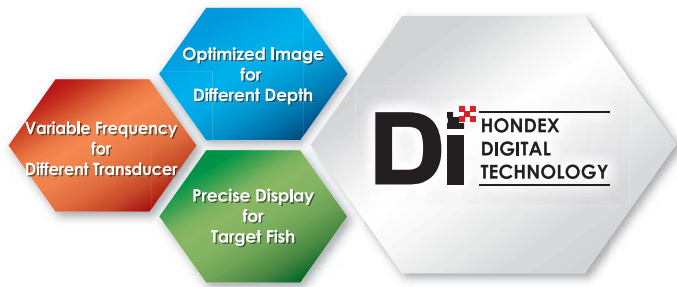

Introducing new technology of direct digital conversion. The optimized filtering even for weak signal is now available. "Deeper detection for deep water" and "Higher resolution image for shallow water" are in your hands.

"Di" Features

Dual display for same frequency:

Different gain settings are possible for single frequency image by splitting the image of single frequency to two different screens.

Whole Display Gain Adjustment:

Gain adjustment reflects to whole the past image (all display presentation).

Black-Box Style Combo
HDX-121-BB

Specifications

Operating Voltage	DC11-35V
Power Consumption	Approx. 10W
Dimension	W268 x D238.5 x H89
Weight	Approx. 1.65kg
Display Style	Portrait

Plotter

Chart	C-MAP SD Card NT+ or MAX
Wake Memory	64,000 points
Mark Memory	48,000 points
Waypoint Memory	1,000 points
Wake Color	7 colors
Route Memory	40 routes

Echo Sounder

Frequency	50&200kHz
Output Power	1kW, 1.8kW
Depth Range	0 - 1,500m (5,000ft) (or fathom/braza)
Background Color	4 colors
Color Configuration	5 patterns

In the Box

- HE-121-BB Main Unit
- Power Cable: DC07
- Remote: CR04



HDX-121-BB Main Unit



DC07



CR04

Options

- GPS: GP-16H, GP-17H, GP-17HD
- Water Temp(Thru-Hull) Kit: TC02CS(15m), TCK01
- Water Temp(Transom): TC03-05/10 (5/10m)



GP-16H



GP-17H/17HD



TC02CS



TCK01



TC03-05/10

Specifications are subject to change without notice.

● Dealer



HONDA ELECTRONICS CO., LTD.

20 Oyamazuka, Oiwa-cho,
Toyohashi, Aichi 441-3193, Japan

TEL: +81-532-41-2512

<https://www.honda-el.co.jp/en/marine/>



HONDEX[®] is the registered trademark of HONDA ELECTRONICS CO.,LTD. in the United States, Japan and other countries.